


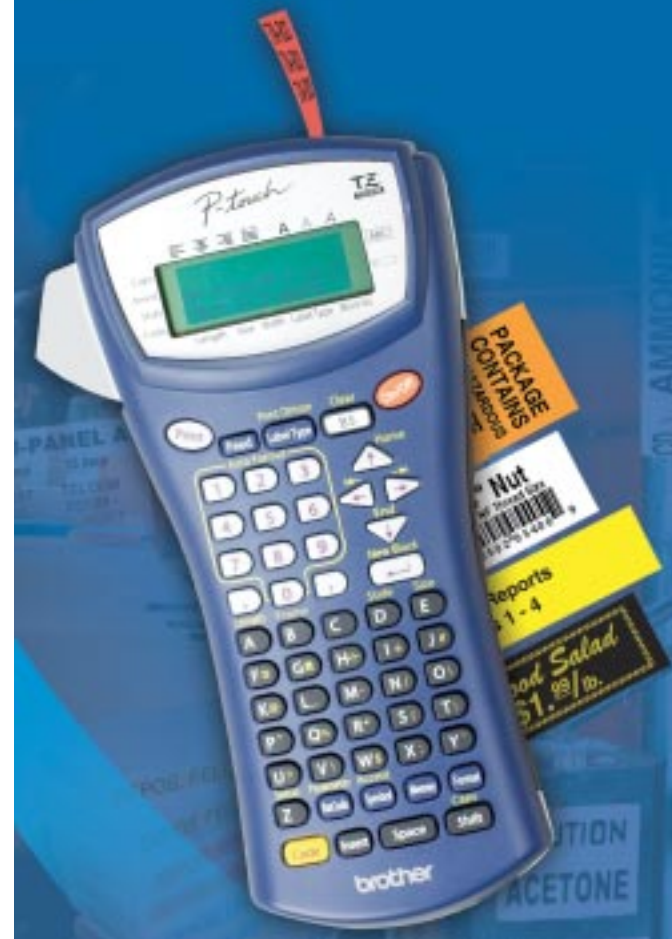

## Quick Reference Guide



### Setup Menu

Code **Z**

- 1. Cut**
  - ▶ 1 (1 = cut-pause; no chain print)
  - ▶ 2 (2 = no cut-pause; no chain print)
  - ▶ 3 (3 = cut-pause; chain print)
  - ▶ 4 (4 = no cut-pause; chain print)
- 2. Contrast**
  - ▶ + 2 to -2 (0 = default, + = darker, - = lighter)
- 3. Auto Reduction**  
If label is set to AUTO size, text size or width will change based on label length.
  - ▶ Text Size
  - ▶ Text Width
- 4. Length Adjustment**  
Increase or decrease the label length if the length differs from actual.
  - ▶ +3 to -1, 0 = default
- 5. Symbol Save**  
Personal Category is full, symbols will be added (on) or not (off).
  - ▶ On
  - ▶ Off
- 6. Units**  
Set unit for measurement.
  - ▶ inch
  - ▶ mm
- 7. Language**  
Set language for menus, settings and messages.
  - ▶ English
  - ▶ Français
- 8. Version Info**  
Version information for P-touch software & symbol set.
  - ▶ Main
  - ▶ Boot
  - ▶ Char-Set (Character Set)
  - ▶ Symb-Set (Symbol Set)

### (Label) Length

Code **A**

- 1. Length**  
Specify label length.
  - ▶ Auto / 0.30 - 39.00inch (Auto / 6 - 999mm)
- 2. Margin**  
Specify margin.
  - ▶ 0.10 - 4.00inch (2 - 99mm)

### Bar Code

Parameter **BarCode**

### Bar Code Functions

Code **BarCode**

- 1. Bar Code**  
Type in bar code data.
- 1. Parameter Settings**  
Set settings for bar code.
  - A. Protocol**  
Specify protocol.
    - ▶ Code 39
    - ▶ Code 128
    - ▶ EAN128
    - ▶ CODABAR
    - ▶ UPC-E
    - ▶ UPC-A
    - ▶ EAN8
    - ▶ EAN13
    - ▶ I-2/5
  - B. Width**  
Specify width of bar code graphic.
    - ▶ Small
    - ▶ Medium
    - ▶ Large
  - C. Under Number**  
Specify whether the number is printed under the bar code.
    - ▶ On
    - ▶ Off
  - D. Check Digit**  
Code 39, I-2/5 and CODABAR only, specify Check Digit on/off.
    - ▶ On
    - ▶ Off

### (Line) Style

Code **D**

- 1. Style**  
Set font style.
  - ▶ Normal
  - ▶ Bold
  - ▶ Outline
  - ▶ Italic
  - ▶ Italic + Bold
  - ▶ Italic + Outline

### (Line) Size

Code **E**

- 1. Size**  
Set the size for an individual line.
  - ▶ Auto
  - ▶ 1mm
  - ▶ 2mm
  - ▶ 3mm
  - ▶ 4mm
  - ▶ 6mm
  - ▶ 9mm
  - ▶ 12mm

### Print Options

Code **Label Type**

- 1. Copies**
  - ▶ 1-99
- 2. Number (sequential labels)**
  - ▶ Off
  - ▶ 1-99
- 3. Block No.**  
Choose the block numbers (start/end) to print.
- 4. Mirror (print text in reverse order)**
  - ▶ Off
  - ▶ On

### Format

Code **Format**

- 1. GLB (Global) Size**  
Set font size for label.
  - ▶ Auto
  - ▶ 1mm
  - ▶ 2mm
  - ▶ 3mm
  - ▶ 4mm
  - ▶ 6mm
  - ▶ 9mm
  - ▶ 12mm
- 2. GLB (Global) Wide**  
Set label font width.
  - ▶ Minimum
  - ▶ Narrow
  - ▶ Normal
  - ▶ Wide
- 3. GLB (Global) Style**  
Set label font style - individual line style overrides settings.
  - ▶ Normal
  - ▶ Bold
  - ▶ Outline
  - ▶ Italic
  - ▶ Italic + Bold
  - ▶ Italic + Outline
- 4. Align**  
Specify text alignment.
  - ▶ Left
  - ▶ Justify
  - ▶ Right
  - ▶ Center

### (Label) Frame

Code **B**

- 1. Frame**  
Choose from 14 different borders.
  - ▶ Off
  - ▶ 1 - 14

### (Label) Clear

Code **BS**

- 1. Clear**  
Clear text (and font) to start new label.
  - ▶ Text & Format
  - ▶ Text Only

### Label Type

Code **Label Type**

- 1. Label Type**  
Specify type of label printed.
  - ▶ Normal
  - ▶ Rotate
  - ▶ Rotate-Repeat
  - ▶ Port
  - ▶ Panel
  - ▶ Flag
  - ▶ Vertical

# Creating & Printing Commonly Used Labels

## General

Sales Out Reports  
Regions 1 - 4

- Press **Label Type** – until Normal.  
Press to select.
- Type *Text* ( for new line, or **Code** to place a block of text to the right).
- To change text style or size per specific line, use to place cursor on line to be changed. Use
  - Code** **D** to specify different font types.  
 to choose. Press to enter.
  - Code** **E** to specify different font sizes.  
 to choose. Press to enter.
- Print**

## Vertical

 
R  
E  
P  
O  
R  
T

W  
I  
R  
E

4 1  
5 2  
6 3

- Press **Label Type** – until Vertical.  
Press to select.
- Type *Text*. Enter more than one line of text with **A** or **B** **Code** . Text will be added to previous text. Example by typing:  
**A) 1. 123** **B) 1. 123** **Code**   
 2. 456      Output:      2. 456      Output:  
**3. Print** **3. Print**   
 (Two Column) (One Column)
- To change text style or size per specific line, use to place cursor on line to be changed. Use
  - Code** **D** to specify different font types.  
 to choose. Press to enter.
  - Code** **E** to specify different font sizes.  
 to choose. Press to enter.
- Print**

## Cable/ Wire Wrap



- Press **Label Type** – until Rot-Rep.  
Press to select.
- Set the length of the label with (*BLK LEN*), use number pad to type length or arrows to select, arrow to the next option.
- Choose frame (*FRAME*) option - Arrow to select, to end.
- Type *Text*.
- To change text style or size per specific line, use to place cursor on line to be changed. Use
  - Code** **D** to specify different font types.  
 to choose. Press to enter.
  - Code** **E** to specify different font sizes.  
 to choose. Press to enter.
- Print**

## Name Badge



- Press **Label Type** – until Normal.  
Press to select.
- Set label length **Code** **A** – use number pad to type length or to specify.  
Press to enter.
- Type *Name*. Press for new line.
- Type *Company*.
- To change text style or size per specific line, use to place cursor on line to be changed. Use
  - Code** **D** to specify different font types.  
 to choose. Press to enter.
  - Code** **E** to specify different font sizes.  
 to choose. Press to enter.
- Print**

## Cable/ Wire Flag



- Press **Label Type** – until Flag.  
Press to select.
- Set the diameter of the cable/wire (*FLAG Φ*) arrows to select, arrow to next option.
- Set the length of the label (*FLAG LEN*), use number pad to type length or arrows to select, arrow to the next option.
- Choose frame (*FRAME*) option - Arrow to select frame, arrow to next option.
- Choose to have text rotated or not (*ROTATE*), arrows to select, to end.
- Type *Text*.
- To change text style or size per specific line, use to place cursor on line to be changed. Use
  - Code** **D** to specify different font types.  
 to choose. Press to enter.
  - Code** **E** to specify different font sizes.  
 to choose. Press to enter.
- Print**

## Port Label



- Press **Label Type** – until Port.  
Press to select.
- Set the length of the label (*BLK LEN*), use pad to type length or arrows to select, arrow to the next option.
- Choose frame (*FRAME*) option - Arrow to select, to end.
- Type *Text*.  
**(continue to next column)**

## Port Label (cont.)



- To change text style or size per specific line, use to place cursor on line to be changed. Use
  - Code** **D** to specify different font types.  
 to choose. Press to enter.
  - Code** **E** to specify different font sizes.  
 to choose. Press to enter.
- Print**

## Panel Label

7C-A01 7C-A02

- Press **Label Type** – until Panel.  
Press to select.
- Set the length of the label with (*BLK LEN*), use number pad to type length or arrows to select, arrow to the next option.
- Choose frame (*FRAME*) option - Arrow to select, to end.
- Choose print option - front of a panel or for the reverse of a panel — arrow to select, to end.
- Type *Text*. Use **Code** to separate port information.
- To change text style or size per specific line, use to place cursor on line to be changed. Use
  - Code** **D** to specify different font types.  
 to choose. Press to enter.
  - Code** **E** to specify different font sizes.  
 to choose. Press to enter.
- Print**