

# WIND WIZARD™

 
 
 
 
An Electronic Anemometer

## I. Function

- A. Wind speed & temperature measurement
- B. Wind chill indicated
- C. Temperature display in Celsius or Fahrenheit
- D. Different wind speed measurement unit
- E. Measure wind speed in: Current / Average / Max
- F. Low battery warning
- G. LCD backlight
- H. Auto / Manual off

## 2. Operation:

- A. Put battery into battery compartment, LCD will blink all display for a second.
- B. Recover battery door, push MODE for 1 second to turn on the unit. LCD will display wind speed, temperature and battery icon. LCD backlight will stay on for 12 seconds.
- C. Setting different wind measurement: Push MODE for 3 seconds until m/s starts to blink. Push SET to select desired measurement unit. To confirm the desired measurement unit by pushing MODE. Digital symbols are: m/s is meter per second; km/hr is kilometer per hour; ft/min is feet per minute; knots is nautical mile per hour; mph is mile per hour; Cu is current wind speed; MAX is max wind speed; AVG is average wind speed.
- D. °C / °F switch option: Press the little conceal key on the rear cabinet to select different temperature unit. This may be done with a small push pin or paper clip
- E. Press any key to activate the LCD backlight for 12 seconds.
- F. Measurement: when the wind vane (impeller) turns, the LCD will instantly display wind speed and temperature. When temperature is below 0° C, "wind chill" symbol will be shown on the LCD.
- G. Push MODE & SET simultaneously to turn off the unit. Unit automatically shuts off after 14 minutes of inactivity.

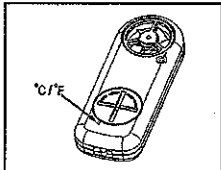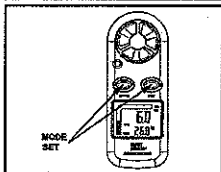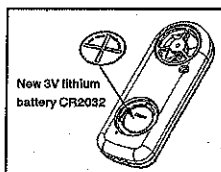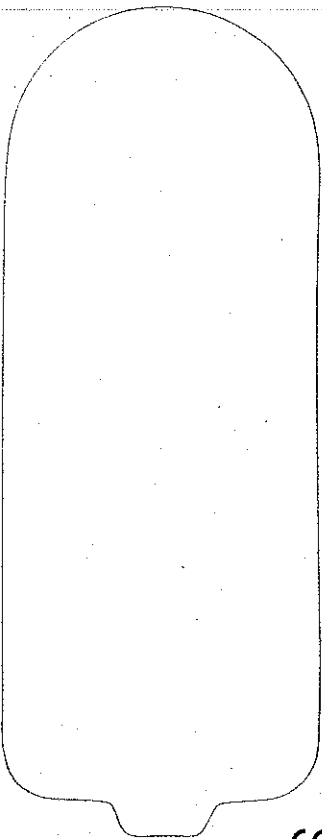

Wind Speed Range				
Unit	Range	Resolution	Threshold	Accuracy
m/s	0~30	0.1	0.1	±5%
ft/min	0~5860	19	39	±5%
knots	0~55	0.2	0.1	±5%
km/hr	0~90	0.3	0.3	±5%
mph	0~65	0.2	0.2	±5%

Temperature Range			
Unit	Range	Resolution	Accuracy
°C	-10°C~45°C	0.1	±5%
°F	-14°F~113°F	19	±5%

Battery	CR2032 3.0V
Weight	1.8 oz. (including battery & lanyard)
Bear	Sapphire Bearing

Thermometer	NTC Thermometer
Operating Temperature	-10°C~45°C (-14°F~113°F)
Operating Humidity	≤90% RH
Store Temperature	-40°C~60°C (-40°F~140°F)
Current Compensation	About 3 mA

Made in China



A **Battenfeld** Product  
5885 West Van Horn Tavern Road  
Columbia, MO 65203  
www.caldwellshooting.com

Insert #379-452

Product #112-350






An Electronic Anemometer

# WIND WIZARD
 
## Features:

- ▶ Measures wind speed in mph, ft/min, Km/h, m/s or Knots
- ▶ Wind speed in Beauford wind scale bar graph
- ▶ Wind chill display
- ▶ Temperature display in Celsius or Fahrenheit
- ▶ LCD back light
- ▶ Auto power OFF
- ▶ Neck band included
- ▶ 3V lithium battery included

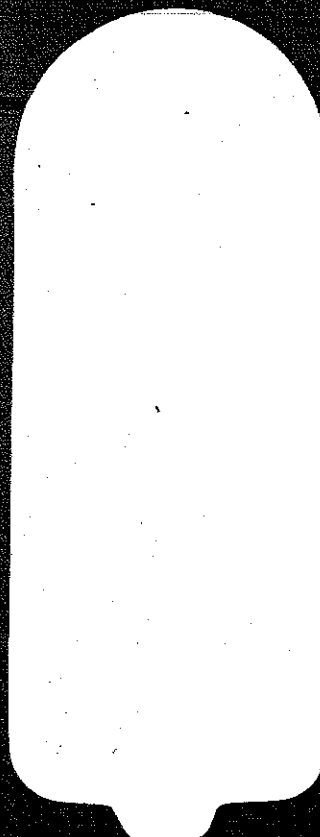

[www.caldwellshooting.com](http://www.caldwellshooting.com)